

LTIP/A1601-753-A

REPLACEMENT LAMP FOR SONY® LCD REAR PROJECTION TELEVISION

USER INSTRUCTIONS

CAUTION:

- Do not attempt to remove the lamp immediately after use; doing so can cause serious burns. Prior to removing lamp, switch off the power supply to the television and wait approximately 60 minutes or more to allow for complete lamp cooling.
- Avoid touching the glass portion(s) of the lamp with bare hands; fingerprints, dirt and dust may cause early lamp failure and/or image obscurity. It is recommended that gloves be worn when replacing the lamp.
- When transporting the replacement lamp, use the box that is provided to avoid breakage.


WARNING:

- To avoid overheating and/or fire, ensure that the replacement lamp is mounted securely.
- The lamp contains mercury. Dispose of it in accordance with local environmental regulations. For disposal or recycling information, contact your local authorities or see www.lamprecycle.org.


REPLACING THE LAMP




1. Switch off power to the television and wait about two minutes until the cooling fan stops. Unplug the power cord from the wall outlet. **Allow the television to cool for at least 1 hour.**

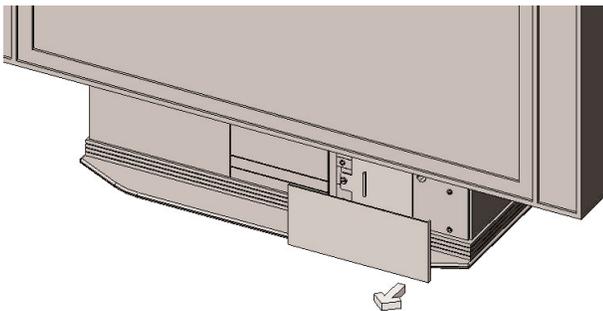


2. Remove the front panel of the television: while holding the television firmly, grasp the right side of the front panel with your fingers and pull the panel towards you.

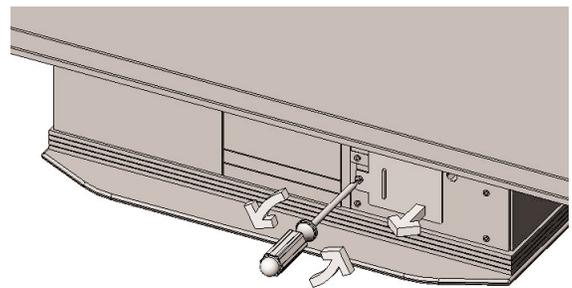

3. Loosen the screw on the lamp cover; remove the cover.

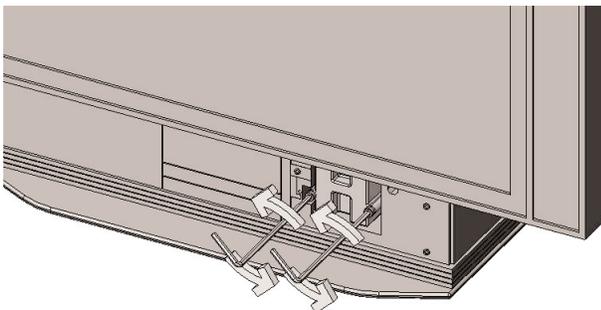


4. Using a hex key, loosen the two screws securing the lamp unit.

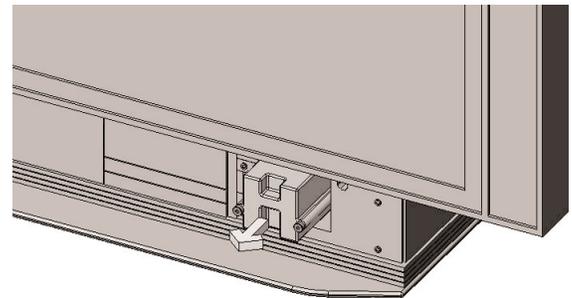


5. Remove the lamp unit from the television by grasping the handle and pulling it out. Dispose of lamp in accordance with local environmental regulations.

Note: To avoid injury, exercise caution when removing the lamp unit and do not place your hand in the lamp storage area.

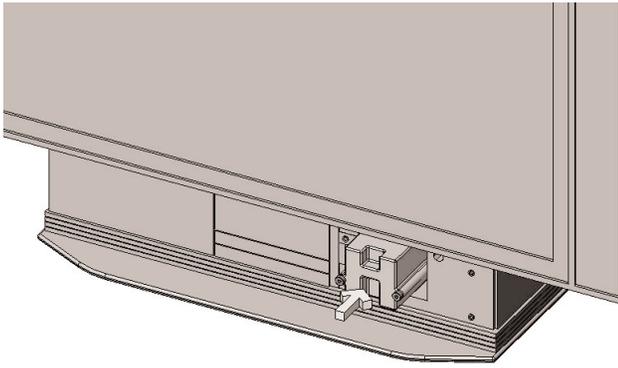


6. Insert the new lamp unit, paying attention to the orientation and direction of insertion. Ensure that the new unit is firmly seated.


Note: To avoid shortened lamp life and/or reduced picture quality, do not touch the glass portion of the new lamp.

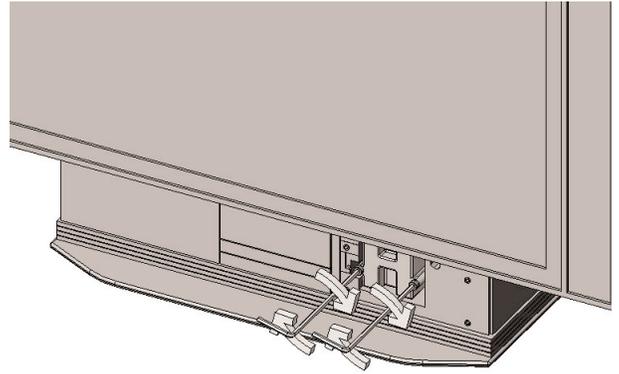

7. Using a hex key, tighten the screws firmly on the new lamp unit in the order shown, taking care not to overtighten.

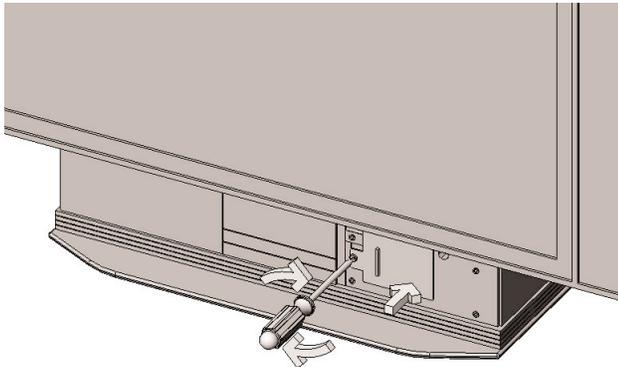

8. Replace the lamp cover and tighten the screw. Ensure that the screw and the cover are mounted correctly and securely, otherwise the power will not turn on.

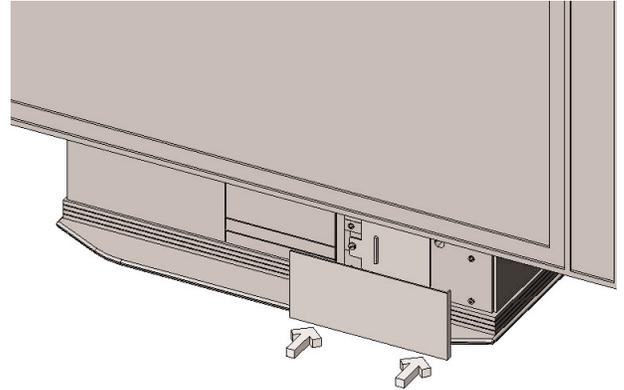

9. Replace the front panel by aligning it on the television and pushing gently from left to right until it snaps into place. Plug the power cord back into the wall outlet and turn on the power.